

ClariSea

SMART CONTROLLER GUIDE



 
Motor button

- Manually advances fleece motor



Alarm button

- Press alarm button for 1 - 2 seconds will turn off audible alarm, but alarm condition will still be present
 - o Red LED still flashing
 - o Automatic advance of fleece disabled.
 - o Motor button will still function as manual advance.
- Pressing the alarm button for > 5 seconds:
 - o **Full reset** - completely clearing alarm state
 - o Disconnecting power: performs reset as above.

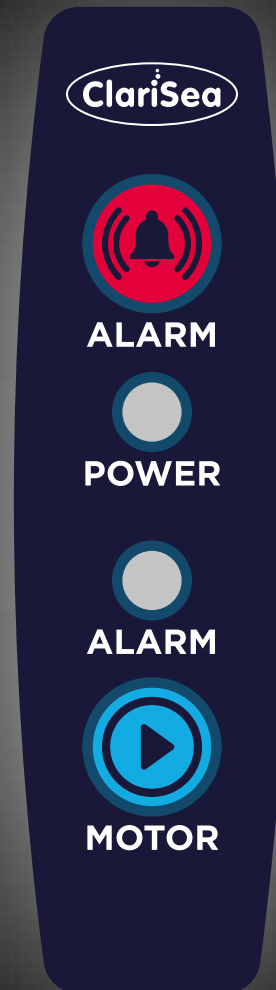

Normal Operation:

Initialisation (Power on or reset):

- Blue/Red LED both flash for 5 times (audible alarm will sound with each flash)
- Blue LED will remain on.

Motor Advance:

Manual or automatic, Blue LED flashes

Possible Alarm Conditions:

Possible roll jam/motor failure (float in 'on' position for more than 5 sec)

- Red alarm LED will flash
- Audible alarm will sound for 2 seconds every 5 seconds
- Automatic advance of fleece disabled.

Possible installation error (float 'on' not triggered with 48 hours)

- Red LED will flash at 10 second intervals (audible alarm will sound with each flash)
- Automatic advance of fleece disabled.

Possible fleece empty (float 'on' not triggered within 8 hours)

- Blue/Red LED both flashing, audible alarm will sound for 1 second every 2 seconds
- Automatic advance of fleece disabled.

For full instructions, operation & troubleshooting visit www.theaquariumsolution.com/clarisea-setup